


FREEONEX

Firmware update


- 1) Copy the file ***.MVA** into an empty USB memory key.
- 2) Turn ON the FREEONEX and wait for the BLUE LED to blink.

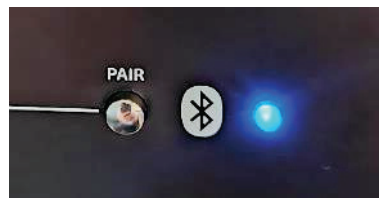

- 3) Insert the USB memory key into the USB socket: the blue LED will turn off to indicate that the update is in progress.



- 4) Once the update is completed the blue LED will light up again.
NOTE: when the update is completed you will hear a small pop, this is normal.

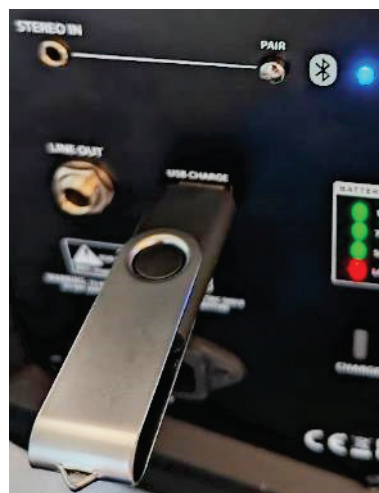

- 5) Turn the speaker off and on again.

IMPORTANT: remove the USB memory key immediately once the update has been carried out, otherwise it will be repeated again. DO NOT remove the USB memory key during the update.